

# UNCORKED CABERNET VIBRATOR

## User manual



### CONTROL

- 1) Hold the top on/off button for approx. 3 seconds to switch off the travel lock.
- 2) Briefly press the button to switch on the vibrator.
- 3) Use the "+" and "-" buttons to cycle through the vibrations.
- 4) Press the top button briefly to switch the vibrator off.
- 5) To switch on the travel lock, hold the on/off buttons for approx. 3 seconds.

### MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The vibrator is **waterproof**, so maintenance is very easy.

It may get splashed with water, but you can safely immerse it in water and enjoy water play.

### LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The vibrator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

In the package you will find a vibrator and USB cable for charging.