

VIBRATING NIPPLE CLAMPS

User manual



CONTROL

- 1) Place two AA batteries in the controller according to the marked poles.
- 2) To turn the scribers on/off, briefly press the ON/OFF button.
- 3) Change the vibration rhythms with short presses of the MODE button.

MAINTENANCE

After each use, use an [erotic cleaner](#), which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The tools are **not waterproof or waterproof!**

DRIVE AND CHARGING

The control unit (driver) is powered by two AA batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Remote control (control unit), 2x cable for connection to the clamp, 2x nipple clamp.