

VIBRATING PENIS SLEEVE

User manual



CONTROL

- 1) The bottom of the vibrating cartridge serves as a cover for the batteries.
- 2) Unscrew it and insert three LR44 batteries into the vibrating cartridge according to the marked poles.
- 3) Screw them back in.
- 4) There is a wheel on the cover that is also used for on/off and infinitely variable vibration control.

MAINTENANCE

After each use, rinse the device with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The cartridge is **water resistant**, so maintenance is very easy.

The cartridge can be splashed with water, but you **MUST NOT immerse it in water!**

Waterproof means that you could completely submerge the product in water and enjoy water play.

Due only to the water resistance of the product, this is not possible in this case.

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrating cartridge is powered by three LR44 batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a penis sleeve, a vibrating cartridge and 3 LR44 batteries.