

# BLACK HAMMER VIBRATOR



## User manual

### CONTROL

- 1) The bottom of the vibrator serves as a cover for the batteries.
- 2) To turn on the vibrator, remove the battery cover, insert two AA batteries (not included) and screw the cover back on.
- 3) The vibrator is turned on and off by turning the wheel on the battery cover, which also serves as a vibration controller.

### MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The vibrator is **not waterproof or water resistant!**

### LUBRICATION

Due to the material of the vibrator, you can use **lubricants of any base**.

### DRIVE AND CHARGING

The vibrator is powered by two AA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

Vibrator.