

ANAL PLUG BLACK FANNY HILL'S



User manual

CONTROL

- 1) The vibrator is connected to a remote control. Remove the remote control cover and insert two AA batteries.
- 2) There is a wheel on the side of the controller, which is used both for switching on and off and for continuous vibration control.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent. You can also use an **erotic cleaner**, which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **not waterproof or water resistant!**

LUBRICATION

Due to the material of the vibrator, you can use **lubricants of any base.**

DRIVE AND CHARGING

The vibrator is powered by two AA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator with remote control.