

EASY RIDER PENIS INSERTABLE

User manual



CONTROL

- 1) Insert two AA batteries (not included) into the remote control.
- 2) There is a wheel on the side of the remote control that is used to turn it on and off, as well as to continuously adjust the vibration.

MAINTENANCE

After each use, rinse the penis with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The penis is **not waterproof or water resistant!**

LUBRICATION

Due to the material of the vibrator, you can use **lubricants of any base**.

DRIVE AND CHARGING

The penis is powered by two AA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Deployable penis with remote control, including clamping belt.