

VIBRATOR YOU2TOYS THRUSTING ANAL



User manual

CONTROL

- 1) The bottom of the vibrator serves as a cover for the batteries.
- 2) To turn on the vibrator, remove the battery cover, insert 3 AAA batteries (not included) and screw the cover back on.
- 3) The individual vibration rhythms are changed using the button with the waveform pictogram.
- 4) Use the button with the arrow pictograms to change the impact function.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **not waterproof or water resistant!**

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by three AAA batteries.

We recommend using alkaline or rechargeable batteries for greater endurance.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator.