

ZOLO THRUSTBUSTER MASTURBATOR

User manual



CONTROL

- 1) Hold the bottom power button for 3 seconds to turn on. The masturbator will greet you by lighting up the LED.
- 2) Subsequent short presses of the middle button with the arrow symbol will turn on and change the wanking modes.
- 3) Pause this function by holding the button for 3 seconds.
- 4) To switch the voice moaning on or off, briefly press the top button with the mouth symbol.
- 5) To turn the masturbator off, briefly press the power button.

MAINTENANCE

After each use, turn the wheel under the buttons to the left and remove the blue cover. At the end of the sleeve, you will find a lock to remove the sleeve from the mechanism. Then unscrew the tip of the plastic cover with the ZOLO logo to release the sleeve. Rinse it under lukewarm water and then apply **erotic cleaner** to rid it of bacteria for your safety. Once completely dry, use a masturbator powder to treat the material and prolong its life.

WATERPROOF

The masturbator is **water resistant**, so maintenance is very easy.

The masturbator can be splashed with water, but you **MUST NOT immerse it in water!**

Waterproof means that you could completely submerge the product in water and enjoy water play.

Due only to the water resistance of the product, this is not possible in this case.

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The masturbator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a masturbator and USB cable for charging.