

# VIBRATOR SAMSON

## User manual



### CONTROL

- 1) The vibrator is connected to a remote control. Remove the remote control cover and insert three AA batteries.
- 2) To turn on the vibration, switch the button from OFF (disabled) to LOW (lowest), MID (middle) or HI (highest vibration). When vibration is on, the LED light on the controller will illuminate.
- 3) To turn off, switch the button on the remote control to the OFF position.

### MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The vibrator is **not waterproof or water resistant!**

### LUBRICATION

Due to the material of the vibrator, you can use **hybrid lubricating gels**.

### DRIVE AND CHARGING

The vibrator is powered by two AA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

Vibrator.