

# TOYJOY PENIS RING FLUTTER VIBRATING



## User manual

### OPERATION

- 1) Press the on/off button on the side of the cartridge.
- 2) To turn off, hold the on/off button on the side of the cartridge.

### MAINTENANCE

Rinse the ring with lukewarm water and soapy detergent after each use.

**CAUTION!** Remove the battery cartridge before washing the vibrating ring!

You can also use [an erotic aid cleaner](#), which also helps to remove microscopic dirt.

Just spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The vibrating ring is not waterproof or water resistant.

### LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and the lubricant will become sticky.

### DRIVE AND CHARGING

The vibrating ring is powered by two LR41 batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

In the package you will find the vibrating ring and 4 spare batteries type LR41.