

# GIFT SET FOR WOMEN BIJOUX INDISCRETS HOROSCOPE



## User manual

### VIBRATOR CONTROL

- 1) Before first use, you need to unscrew the top and remove the protective wheel from the battery, which prevents the vibrator from starting up by itself.
- 2) Switch on the tool by briefly pressing on its tip.
- 3) Subsequent short squeezes are used to gradually switch the vibration programs
- 4) To turn the vibrator off, hold it for a longer time.

### MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy.

Water resistant means that splashing water will fall on it, but you **MUST NOT submerge it in water!**

You could only immerse the product in water if it was **waterproof**.

### LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The vibrator is powered by three LR41 batteries, which are included in the packa

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

Necklace with birthstone, mini vibrator and 3 LR41 batteries.