

BLUSH M FOR MEN ASHLEY VANILLA STROKER



User manual

OPERATION

- 1) Remove the battery cover from the vibrating cartridge, insert the AAA battery (not included) and screw the cover back on.
- 2) Press the on/off button on the side of the cartridge.
- 3) To turn off, hold the on/off button on the side of the cartridge.

MAINTENANCE

Rinse the stroker with lukewarm water and soapy detergent after each use.

CAUTION! Remove the battery cartridge before washing the stroker!

You can also use [an erotic aid cleaner](#), which also helps to remove microscopic dirt.

Just spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrating cartridge is not waterproof or water resistant.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and the lubricant will become sticky.

DRIVE AND CHARGING

The vibrating cartridge is powered by an AAA battery.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a sleeve (stroker) and a vibrating cartridge.