

BLUSH ENLUST AYUMI VIBRATING STROKER



User manual

CONTROL

- 1) Press the “Blush” button on the side of the cartridge to turn it on.
- 2) Press the “Blush” button on the side of the cartridge to turn it off.
- 3) Scan the QR code on the masturbator box to view the AI model.

MAINTENANCE

Rinse the stroker with lukewarm water and soapy detergent after each use.

CAUTION! Remove the battery cartridge before washing the stroker!

We also recommend using [an erotic aid cleaner](#), which also helps to remove microscopic dirt.

Just spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrating cartridge **is not waterproof or water resistant.**

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and the lubricant will become sticky.

DRIVE AND CHARGING

The vibrating cartridge is powered by a AAA battery.

For longer battery life, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

The package includes a stroker and a vibrating cartridge.