

# FF SERIES REMOTE CONTROL VIBRATING PANTIES



## User manual

### CONTROL

- 1) Hold down the power button on the cartridge for 3 seconds to enter standby mode.
- 2) Subsequent short presses turn on and change the individual vibration and pulsation rhythms.
- 3) Turn the cartridge off by holding the power button for 3 seconds.
- 4) For use with the remote control, turn the cartridge to standby mode.
- 5) Press the button on the remote control briefly to turn on and change the individual vibration and pulsation rhythms.
- 6) Hold this button for 3 seconds to pause the vibration.
- 7) The cartridge must then be switched off with its own button.

### MAINTENANCE

After each use, rinse the cartridge with lukewarm water and soapy detergent. You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The product is **not water resistant or waterproof!**

### LUBRICATION

Due to the material of the vibrator, you can use [lubricants of any base](#).

### DRIVE AND CHARGING

The product is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use. Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

In the package you will find panties, vibrating cartridge, remote control and USB cable for charging.