

VIBRÁTOR FANTASY C-RINGZ SILICONE DOUBLE PENETRATOR RABBIT



User manual

CONTROL

- 1) The bottom of the vibrator, fitted with a button, also serves as a battery cover.
- 2) Unscrew the cover, insert the AAA battery according to the marked poles and screw it back on.
- 3) To switch the vibrator on/off, briefly press the button on the battery cover.
- 4) Follow the same procedure to operate the clitoral stimulator (rabbit).

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent. You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **waterproof**, so maintenance is very easy. It may get splashed with water, but you can safely immerse it in water and enjoy water play.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by an AAA battery. The clitoral stimulator is also powered by an AAA battery. We recommend the use of alkaline or rechargeable batteries for greater endurance.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator.