

# BAD GIRL VIBRATING ASS MASTURBATOR



## User manual

### CONTROL

- 1) There is a hole in the front of the masturbator to accommodate the vibrating egg.
- 2) Insert two AA batteries into the remote control.
- 3) After placing the egg in the hole, turn on the vibration by turning the dial on the side of the remote, which also serves as a stepless vibration control.

### MAINTENANCE

After each use, rinse the masturbator with lukewarm water and soapy detergent.

**ATTENTION!** Always remove the vibrating egg before maintenance of the masturbator!

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The vibrating egg is **not waterproof or water resistant!**

### LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The vibrating egg is powered by two AA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

Masturbator and vibrating egg with remote control.