

MASTURBATOR PDX ELITE VIBRATING PUSSY STROKER



User manual

OPERATION

- 1) There is a vibrating cartridge on the bottom of the masturbator, pull it out, unscrew the battery cover and remove the slide that is located between the cover and the battery.
- 2) Press the on/off button on the side of the cartridge.
- 3) Vibration will activate after each impact.

MAINTENANCE

After each use, remove the insert from the plastic packaging and rinse with lukewarm water.

You can also use [an erotic aid cleaner](#), which also helps to remove microscopic dirt.

Just spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrating cartridge **is not waterproof or water resistant!**

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and the lubricant will become sticky.

DRIVE AND CHARGING

The vibrating cartridge is powered by three LR44 batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a masturbator with a vibrating cartridge, in which 3 LR44 batteries are placed.