

# VIBRATOR GLOSSY SLIM

## User manual



### CONTROL

- 1) At the bottom of the vibrator there is a cover for AAA batteries.
- 2) Press the "power" button, located on the battery cover, to start the vibrator.
- 3) Pressing the "power" button, located on the battery cover, also switches the vibrator off.

### MAINTENANCE

After each use, rinse the product with lukewarm water.

We also recommend using an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The product is **not waterproof or water resistant!**

### LUBRICATION

Due to the material of the product, you can use **lubricants of any base**.

### DRIVE AND CHARGING

The product is powered by two AAA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

In the package you will find a vibrator.