

VIBRATING EGG HAPPY LOKY OCIAN REMOTE CONTROL



User manual

CONTROL

- 1) Long press the button for 3 seconds to put the egg in standby. The LED indicator lights up.
- 2) Press the button for 5 seconds to pair the egg, the LED will flash.
- 3) Then, with a single short press of the button either on the egg or on the controller, you can select between modes.
- 4) Use the same procedure as for switching on to switch the device off.

MAINTENANCE

After each use, rinse the egg with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The egg is **water resistant**, so maintenance is very easy.

The egg can be splashed with water, but you **MUST NOT immerse it in water!**

Waterproof means that you could completely submerge the product in water and enjoy water play.

Due only to the water resistance of the product, this is not possible in this case.

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The egg is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

The remote control is powered by CR 2032 batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a vibrating egg, a remote control, a USB cable for charging and a CR 2032 battery.