

# CLITORAL STIMULATOR DAME PRODUCTS POM FLEXIBLE



## User manual

### CONTROL

- 1) To activate the button lock, hold down the rear single button for 10 seconds. The LED will flash blue. When it goes off, the lock is activated.
- 2) Deactivate it by connecting it to the USB cable.
- 3) Hold the rear separate button for 2 seconds to turn the stimulator on and off.
- 4) Short presses of this button change the individual vibration and pulsation rhythms.
- 5) Short presses of the inner button with the raised dot add power, short presses of the inner button without the symbol take it away.

### MAINTENANCE

After each use, rinse the product with lukewarm water and soapy detergent. You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The product is **waterproof**, so maintenance is very easy. It may get splashed with water, but you can safely immerse it in water and enjoy water play.

### LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The product is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use. Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

In the package you will find a clitoral stimulator and magnetic USB cable for charging.