

DREAM TOYS THE GIRL NEXT DOOR TWERKING BRITNEY MASTURBATOR



User manual

CONTROL

- 1) The masturbator has only two buttons at the top. Holding the "power" button for 2 seconds to put the device into standby mode.
- 2) Holding the same button will turn it off again.
- 3) Short presses of the second button with the "curve" symbol change the individual vibration programs.
- 4) Holding it down again switches the vibrations off, but the masturbator remains in standby mode, which you can tell by the red backlight on the control panel.

MAINTENANCE

After each use, rinse the product with lukewarm water.

We also recommend using an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth, which and let it air dry. You can dust it occasionally with masturbator powder to restore the look and feel of the material and extend its life.

WATERPROOF

The product is **not water resistant or waterproof!**

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The product is powered by an integrated battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a masturbator USB cable for charging.