

# VIBRATOR DREAM TOYS

## VIBES OF LOVE CLIMAX BULLET



### User manual

#### CONTROL

- 1) The bottom of the vibrator serves as a cover for the batteries.
- 2) Remove the battery cover, insert the AAA battery (not included) and screw the cover back on.
- 3) Turn on the vibrator by holding the button on the battery cover for approximately 3 seconds.
- 4) Subsequent short presses to switch between the different vibration rhythms.
- 5) Turn the vibrator off by holding the button for approx. 3 seconds.

#### MAINTENANCE

After each use, rinse the product with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

#### WATERPROOF

The product is **waterproof**, so maintenance is very easy.

It may get splashed with water, but you can safely immerse it in water and enjoy water play.

#### LUBRICATION

Due to the material of the product, you can use **lubricants of any base**.

#### DRIVE AND CHARGING

The product is powered by AAA battery. For greater endurance, we recommend using alkaline or rechargeable batteries.

#### STORAGE

Store separately from other erotic aids in a dry and dark place.

#### PACKAGING CONTENTS

Vibrator.