

# VIBRATOR EASYTOYS MAD RABBIT

## User manual



### CONTROL

- 1) The vibration intensity is controlled by a single button at the bottom, where you can choose from 7 modes and 3 speeds.
- 2) Short presses change the vibration mode, longer presses turn the vibrator on/off.

### MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent. You can also use an **erotic cleaner**, which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The vibrator is **waterproof**, so maintenance is very easy. It may get splashed with water, but you can safely immerse it in water and enjoy water play.

### LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The vibrator is powered by three AAA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

Vibrator.