

NS NOVELTIES LUST-N-DREAMS CADENCE VIBRATOR

User manual



CONTROL

- 1) Hold the bottom “power” button for about 3 seconds to switch to standby mode. You will be greeted with a short vibration and the LED display will light up.
- 2) Short presses of the “power” button turn on the vibrations and change their vibration rhythms.
- 3) Short presses of the top button with the “arrow” symbol turn on the tip movement and change its modes.
- 4) Hold the top button for about 3 seconds to pause the tip movement.
- 5) Hold the bottom button for less than 3 seconds to turn off the vibrator.

MAINTENANCE

After each use, rinse the product with lukewarm water.

We also recommend using an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The product is fully **waterproof**, so maintenance is very easy.

It may get splashed with water, but you can safely immerse it in water and enjoy water play.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The product is powered by an integrated battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently. Charging time is about 90 minutes.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a vibrator and magnetic USB cable for charging.