

NS NOVELTIES LUST-N-DREAMS

POISE VIBRATOR



User manual

CONTROL

- 1) Hold the “power” button for about 3 seconds to switch to standby mode. You will be greeted with a short vibration and the LED will light up.
- 2) With subsequent short presses of this button, you turn on the vibrations and tip movement and change the individual rhythms.
- 3) Hold the “power” button for about 3 seconds to turn it off.

MAINTENANCE

After each use, rinse the product with lukewarm water.
We also recommend using an [erotic cleaner](#), which also helps to remove microscopic dirt.
Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The product is **water resistant**, so maintenance is very easy.
The product can be splashed with water, but you **MUST NOT immerse it in water!**
Waterproof means that you could completely submerge the product in water and enjoy water play.
Due only to the water resistance of the product, this is not possible in this case.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The product is powered by an integrated battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.
Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.
Charging time is about 90 minutes.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a vibrator and USB cable for charging.