

PRETTY LOVE OZZY PUSSY MASTURBATOR



User manual

CONTROL

- 1) On the back of the masturbator you will find the battery cover.
- 2) Remove the battery cover, insert three AAA batteries (not included).
- 3) Turn on the masturbator by pressing the top "power" button.
- 4) Short presses of the button with the "arrow" symbol switch between the individual thrusting rhythms.
- 5) Turn off the masturbator by pressing the top "power" button.

MAINTENANCE

After each use, always remove the insert from the masturbator and rinse with lukewarm water.

We also recommend using an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The product is **not waterproof or water resistant!** Only the sleeve of the masturbator is waterproof.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The product is powered by three AAA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package includes a masturbator.