

# PRETTY LOVE BIHOP VIBRATOR



## User manual

### CONTROL

- 1) The bottom of the vibrator serves as a battery cover.
- 2) Remove the battery cover, insert 2 AAA batteries (not included) and screw the cover back on.
- 3) Turn on the vibrator by pressing the bottom "power" button for about 3 seconds.
- 4) To turn on and change the vibration rhythms, briefly press the top button with the "wave" symbol.
- 5) Turn off the vibrator by pressing the bottom "power" button for about 3 seconds.

### MAINTENANCE

After each use, rinse the product with lukewarm water.

We also recommend using an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The product is **water resistant**, so maintenance is very easy.

Water resistant means that splashing water will fall on it, but you **MUST NOT submerge it in water!**

You could only immerse the product in water if it was **waterproof**.

### LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The product is powered by two AAA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

Vibrator.