

# NIPPLE CLAMPS TABOOM NIPPLE PLAY VIBRATING (Cartridge)



## User manual

### CONTROL

- 1) Press the on/off button on the side of the cartridge.
- 2) To turn off, hold the on/off button on the side of the cartridge.

### MAINTENANCE

After each use, rinse the product with a cloth and lukewarm water with soapy detergent.

You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The product is **not waterproof or water resistant!**

### DRIVE AND CHARGING

The vibrating cartridge is powered by three LR44 batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

In the package you will find nipple clamps with vibrating cartridges and 6x LR44 battery.