


LELO
SONA™

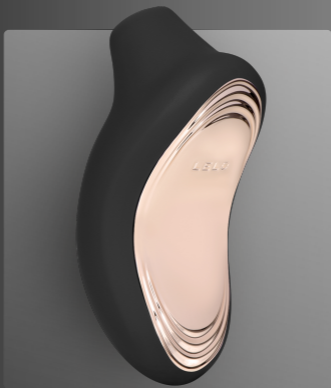

USER MANUAL

SONA_PUB1_Q422_EN

The clitoris is the only feature known
to science whose sole function
is to stimulate pleasure.

Use it wisely, often and with care.

Congratulations on acquiring the SONA™ Clitoral Massager.

Before getting more closely acquainted with it, please take a moment to look through this user manual.

IMPORTANT

Your pleasure object has been locked for transportation.

To unlock, simply connect the charger or see below.

SAFETY

- Please consult your healthcare provider with any questions or concerns you may have regarding your condition.
- This product can be used by adults only. Keep out of reach of children.
- People with reduced physical, sensory or mental capabilities or lack of experience and knowledge should use the device only if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved.
- Only use the product for the intended purpose. Sharing sex toys with other people may transmit sexual diseases. Do not share your sex toys with people other than your partner.
- Use protective measures with your partner if necessary.
- Do not use the product if you detect any cracks or signs of degradation on the covering material.
- To prevent stains, do not keep your product on the absorbent surfaces. If your product operates abnormally, turn off and consult the support section on our website.
- Do not use the product if one or more components are damaged.

COMPLIANCE STATEMENT

a. WARNING

Please take note that changes or modifications not expressly approved in writing by the party responsible for compliance could void the user's authority to operate the equipment and/or void any relevant warranties.

b. FCC and IC statements

This device complies with Part 15 of the FCC Rules and Industry.

Canada license-exempt RSS Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This class B digital apparatus complies with Canadian ICES-003.

b. Déclarations relatives à la FCC et à l'IC

Ce produit est conforme à la section 15 des règles de la FCC et aux normes d'exemption de licence RSS d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes :

- (1) cet appareil ne doit pas causer d'interférences nuisibles, et
- (2) il doit accepter toute interférence reçue, notamment celles susceptibles d'entraîner un fonctionnement non désiré.

Cet appareil numérique de classe B est conforme à la norme canadienne NMB-003.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

GETTING STARTED

Before first use, charge your SONA™ for 2 hours.

Once charged, press the + button to activate.


You can switch between 8 vibration patterns using the **0** button.

Use the + and – buttons to adjust vibration strength.

Press the – button to reduce vibration strength to a level you are comfortable with. Keep SONA™ in contact with the body to check vibration strength.


Holding down the **0** button will turn off your SONA™.

GETTING TO KNOW YOUR SONA™

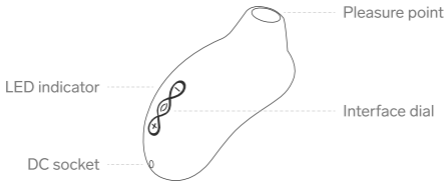


USING YOUR SONA™

How to hold

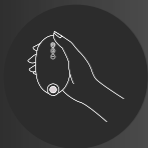

Where to place on the body

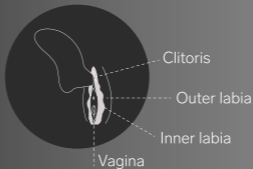


Tip: For an even more pleasurable sensation, apply a liberal amount of LELO Personal Moisturizer to your body and to SONA™ before and during use.

TIPS ON USING YOUR SONA™

Positions to use


The bedroom isn't the only perfect place for SONA™.

Reclining in a warm bath helps to add new sensations and techniques for exploration.

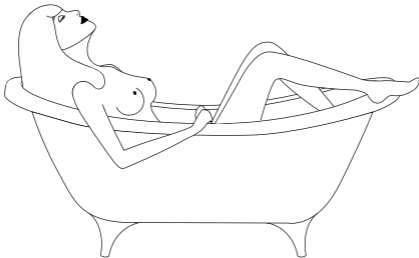

CHARGING YOUR SONA™

- Insert the DC plug into the DC port at the base of your SONA™.
- Insert the mains plug into a wall socket. The LED on the interface of your SONA™ will pulse to indicate it is charging. When it is fully charged (after c. 2 hours), the LED will emit a steady glow.
- When the battery is running low, the LED on your SONA™ will emit a blinking white light.

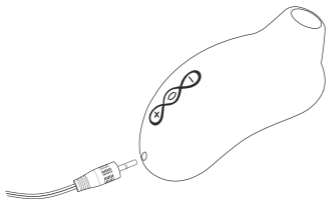

Only use original chargers provided by LELO with your SONA™.

CLEANING, STORAGE, AND SAFETY

Your SONA™ will offer years of enjoyment with proper maintenance and care.

Using your SONA™ with hand creams or silicone-based lubricants may make the silicone permanently tacky.

SONA™ is fully waterproof, making cleaning simple. Rinse and spray with LELO Toy Cleaner, then rinse again and allow to dry. A cotton swab can be used to clean the inside of the 'mouth'.

Always clean your SONA™ thoroughly before and after each use. You can wash the silicone with warm water and antibacterial soap, rinse with clean hot water and pat dry with a lint-free cloth or towel. Never use cleansers containing alcohol, petrol or acetone.

Avoid leaving your SONA™ in direct sunlight and NEVER expose it to extreme heat.

Store your SONA™ in a dust-free place and keep it away from products of other materials.

TROUBLESHOOTING

The LED on your SONA™ does not pulse when the charger is connected?

- Battery is drained and will require several minutes to acknowledge that it is being charged.
- Charger is not properly connected. Check wall and DC sockets.

Your SONA™ does not activate when + is pressed?

- The battery is empty. Recharge your SONA™.
- The interface of your SONA™ is locked.
Hold down + and – for 5 seconds.

If you experience any other problems with your SONA™ or if you have any questions regarding the operation, please contact: customercare@lelo.com

SPECIFICATIONS

Materials: Body-safe Silicone/ABS

Available colors: Cerise, Pink, Black

Max noise level: 60dB

Frequency: 130 Hz

Modes: 8

Interface: 3-button

Battery: Li-Ion 500mAh 3.7V

User time: Up to 2 h

Charge time: Up to 2 h at 5.0V 500mA

Standby: Up to 90 days

REGISTER WARRANTY

To activate your 1-year Limited Warranty, register the number provided on the LELO Authenticity Card at LELO.COM/SUPPORT.

1-YEAR WARRANTY

LELO warrants this pleasure object for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials.

The warranty covers working parts that affect the function of the pleasure object. It does NOT cover cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse, or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty.

If you discover a defect and notify LELO during the warranty period, LELO will, at its discretion, replace the pleasure object free of charge. Claims under warranty must be supported by reasonable evidence of the date of claim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period. To claim your warranty, you must log in to your account at LELO.COM and then select the option to make a warranty claim.

Shipping costs are non-refundable. This undertaking is in addition to the consumer's statutory rights and does not affect those rights in any way.

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):

The crossed-out dustbin symbol indicates that this pleasure object should not be treated as household waste, but rather be brought to the appropriate collection point for the recycling of electrical and electronic equipment.



RoHS



UK
CA

FC



SERIAL NO.

SN

IPX 7



MANUFACTURER DATE



FOLLOW INSTRUCTION FOR USE



ETICHETTA AMBIENTALE	
Categoria	Lettera verde per la raccolta differenziata
SCATOLA COLORATA	RACCOLTA CARTONINO
SCATOLA DI CARTONE	RACCOLTA CARTONINO
MOGGIO IN EVA	RACCOLTA PLASTICA
BOFFA NON TESSUTA	RACCOLTA PLASTICA
FOVIER BOLD PET	RACCOLTA PLASTICA
MANUALE	RACCOLTA CARTA

Hereby, LELoI AB declares that the radio equipment type [Non-Specific Short Range Device] is in compliance with Directive 2014/53/EU. LELoI AB declares that the product is also compliant with Directive 2011/65/EU (RoHS). The full text of the EU declaration of conformity is available at the following internet address: <http://www.lelo.com/regulatory>

DISCLAIMER: Users of this product do so at their own risk. Neither LELo nor its retailers assume any responsibility or liability for the use of this product. Changes or modifications not expressly approved by the manufacturer may void the user's authority to operate the equipment. The model may be changed for improvements without notice.

© 2022 LELoI AB. All rights reserved.

LELoI AB, Karlavägen 41, 114 31 Stockholm, Sweden.

Distributed in the US by LELo USA Inc., 5799 Fontanoso Way, San Jose, CA 95138, USA.

Distributed in Australia by LELo Oceania 6 Prohasky Street, Port Melbourne, VIC 3207, Australia.

Designed and developed by LELo Sweden.

Made in China.

US and International patents or patent applications apply to this product: visit <https://www.lelo.com/intellectual-property>

www.lelo.com